


SICURO[®]



Correct gas cylinder handling

www.saf-fro.it

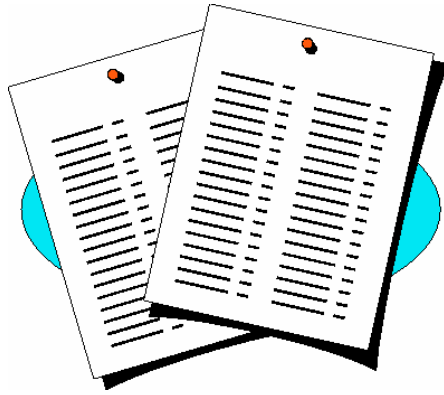

- Before using gas, **carefully read** the safety cards

- Always use **personal protection equipment (P.P.E.)** when handling gas cylinders





YES!

- To move a cylinder, check balance first, keep one hand on the cap, the cylinder next to the body, and rotate the drum with the other hand.



NO!



- **The cylinders are heavy!**
A 50 litre cylinder weighs approx. 80 Kg.




- When lifting or lowering a cylinder, always keep your legs bent and back straight.



- Be careful of twisting body parts and erroneous movements.





NEVER TRY TO CATCH A FALLING CYLINDER!

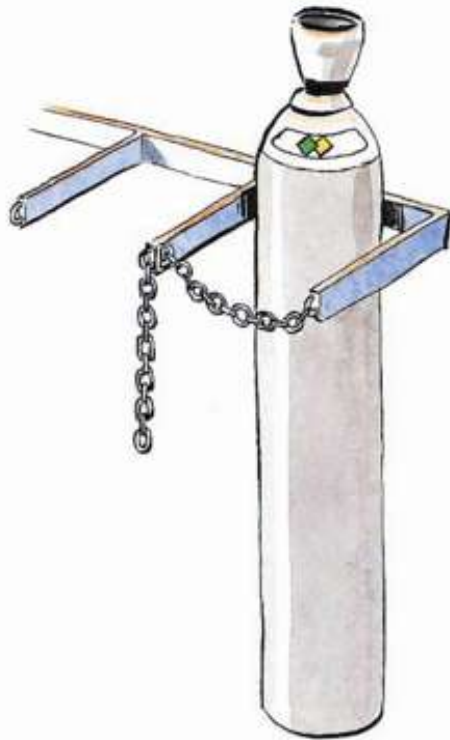


- Whether stored or in use, keep cylinders firmly fixed in order to avoid falling.

A CYLINDER THAT DOES NOT HAVE A CAP AND FALLS, TURNS INTO A MISSILE!

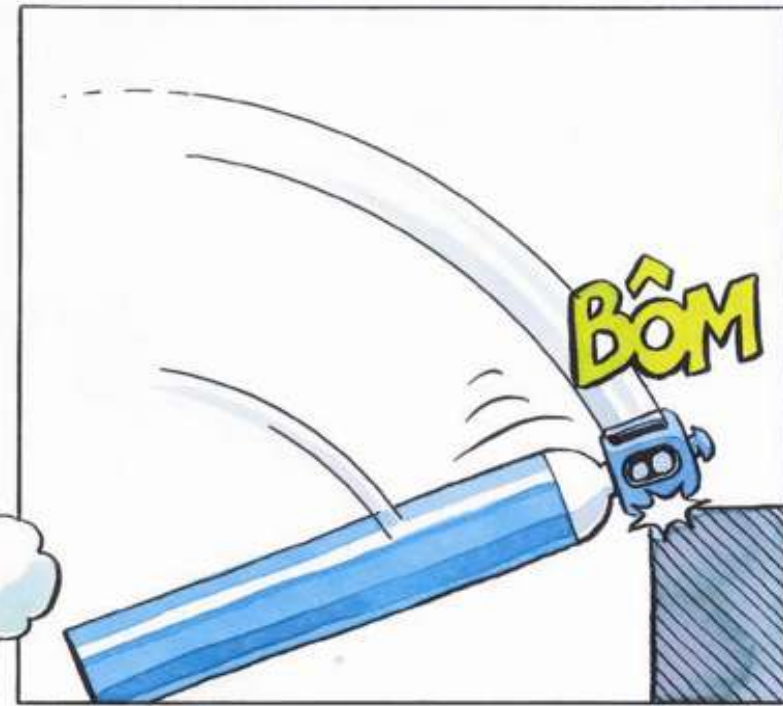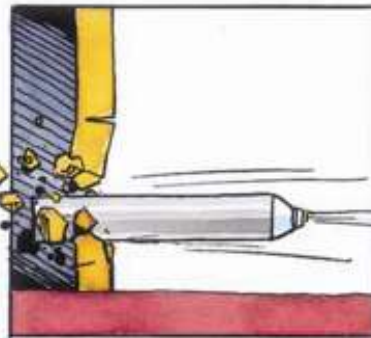

**ALWAYS
REMEMBER TO
KEEP THE CAP ON
THE CYLINDER!**

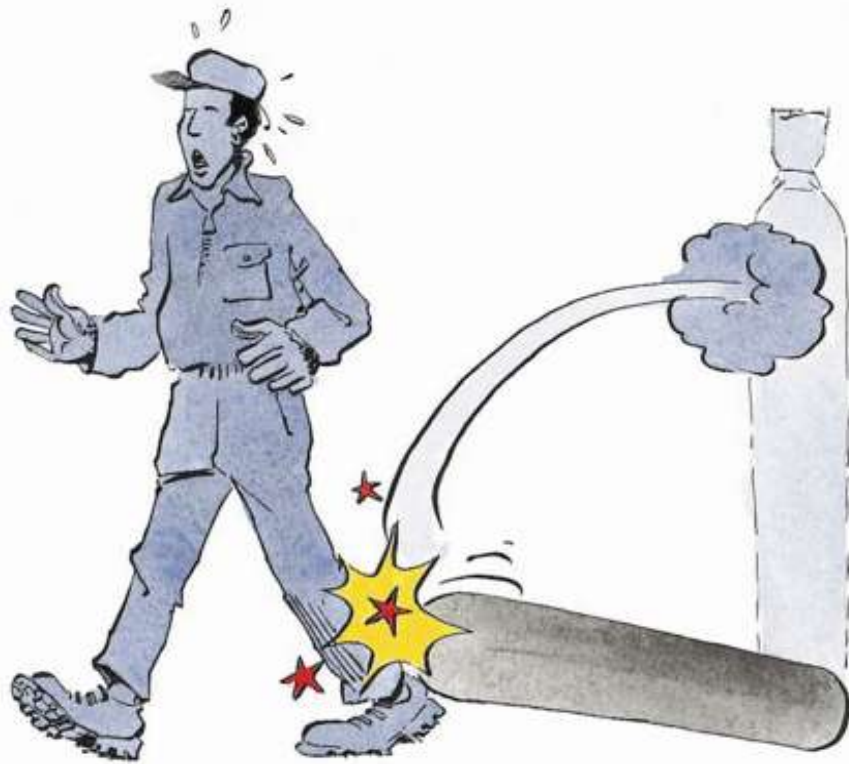

- Never turn your back on a cylinder that you deposit without fixing it in place.

USE GOOD PRACTICE AND SECURE THE CYLINDERS



- To remove, or insert, a cylinder from a ramp or basket, place one hand on the cap and the other on the ogive.

BE WARY ABOUT YOUR FINGERS!



Card no. 06

- Never use cylinders for reasons other than those for which they are intended.

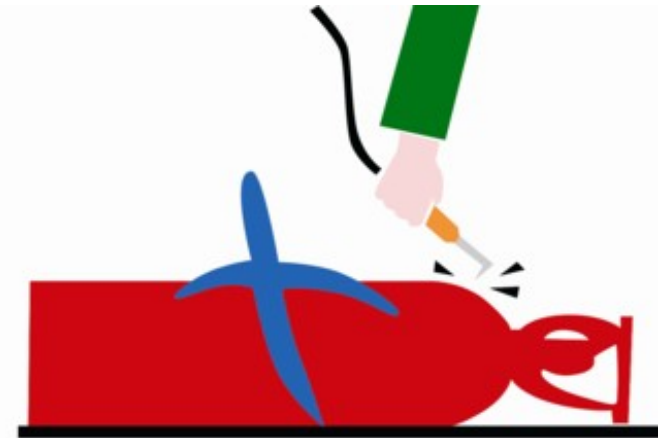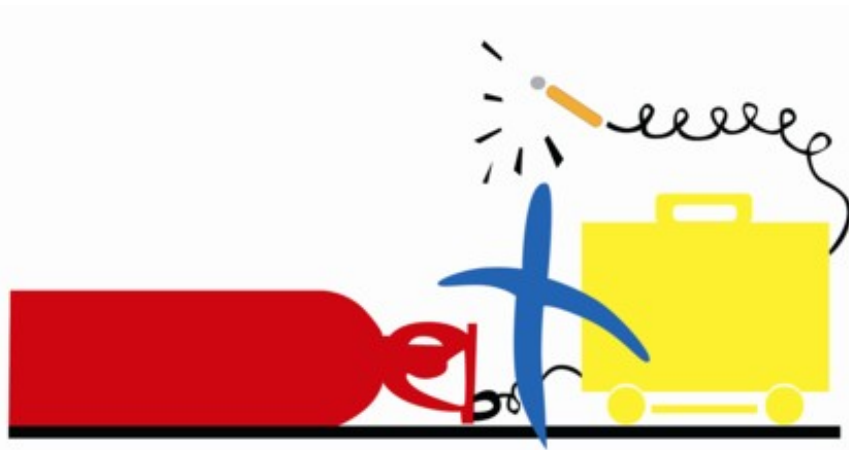



- When opening the valve or acting on the reducer, always do so slowly and place yourself at the opposite side from where the gas is released!!!

**ATTENTION:
A FLEXIBLE TUBE
CONNECTED
IMPROPERLY, OR
WHICH BREAKS,
TURNS INTO A
WHIP!**




- It is forbidden to use second-rate fittings on gas cylinders!



- Always identify the ideal place for storing cylinders.

- Stored cylinders must not be exposed to direct sun light.

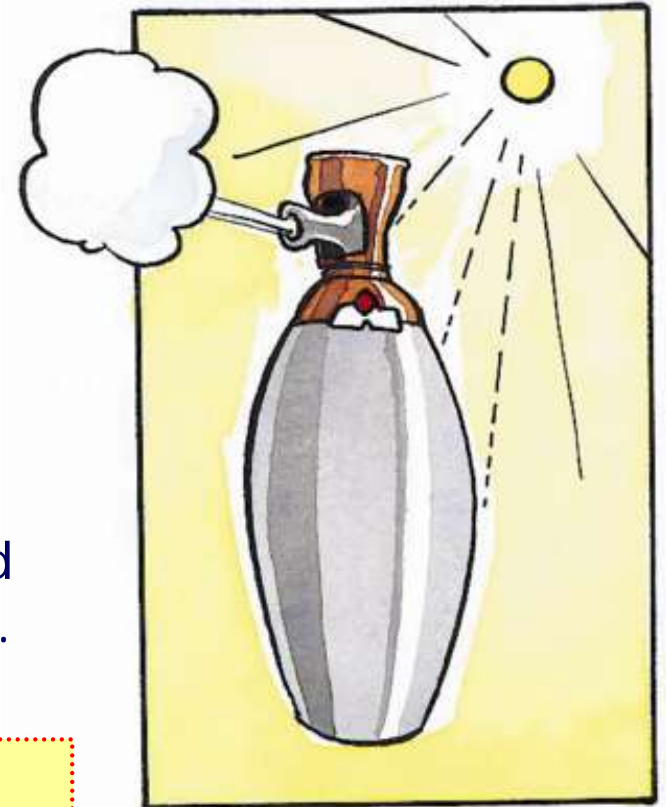

**KEEP FULL CYLINDERS SEPARATE FROM
EMPTY ONES**

**KEEP COMBUSTIBLE GAS SEPARATE FROM
OXIDISING GAS**



■ It is dangerous:

✓ To lay Acetylene cylinders flat



✓ To use Oxygen for cleaning yourself



La nuova cultura della sicurezza

Per maggiori informazioni:

www.sicuro.it